

## Instructions

To install this Printer Driver for either Print Shop or the Print Shop Companion, follow these steps:

- 1) Boot up the Print Shop or Print Shop Companion disk, as normal.
- 2) At the main menu, press the arrow key to highlight "SETUP".
- 3) Next, remove the program disk and put the appropriate side of the Printer Driver disk into your drive (side A for Print Shop, or side B for the Print Shop Companion).
- 4) Now press the RETURN key, and it will load the Printer Driver. Once loaded, a message on the screen will tell you to press any key to continue. Doing so, will take you back to the main menu.
- 5) Finally, remove the Printer Driver disk from the drive, then place the program disk (Print Shop or Print Shop Companion) back into your drive. You are now ready to use your Epson LQ-500, LQ-800, or other compatible printer with the program!

Notes: Any time you turn on your computer to use this Printer Driver, it MUST be loaded from it's disk (as in the above steps). However, once loaded, the Printer Driver remains resident in memory. You can make as many print-outs as you wish (greeting cards, calenders, signs, stationary, etc.), without having to reload the driver.

Be sure to use the correct side of the Printer Driver disk (side A for Print Shop, side B for Print Shop Companion). It does NOT modify your original program disks! (a built-in safety feature) Since this utility is made for the Epson LQ-500 and LQ-800 printers, it should work with other 24-pin printers, as well! (like the Star NX-2400, Panasonic 1124, and many others!)

If you have any questions on this, or any of other fine products, please contact us. (Address and phone number on front page)

