

```

*****
*
*   Printer Driver: Atari 1020   *
*
*   For Use With Print Shop &   *
*   The Print Shop Companion    *
*   On the Atari 8-bit Computers *
*
*   Copyright (c) 1989          *
*   Sector One Computers        *
*
*   Marketted Exclusively By:   *
*
*   Innovative Concepts (I.C.)  *
*   31172 Shawn Drive          *
*   Warren, MI 48093 USA       *
*   BBS: (313) 978-1685        *
*   Phone: (313) 293-0730      *
*   Compuserve: 76004,1764     *
*   Now! CN GENIE, I.C.        *
*****

```

Credits: This utility was programmed by Jim Steinbrecher, of Sector One Computers, and is marketted exclusively by I.C. Atari and the 1020 are trademarks of Atari Corp. Print Shop and Print Shop Companion are trademarks of Broderbund Software.

Warranty: We at I.C. guarantee this software product to be free of defects, for a period of thirty (30) days. We will replace the defective disk, within this period. After this warranty period, replacement disk will be at a nominal \$5 charge (must send original disk). This warranty becomes NULL and VOID due to; tampering, abuse, neglect, or use beyond it's intended application.

WARNING! This software is Copyrighted! It is NOT to be placed in a User Group library (or PD collection), or on a BBS. We at I.C. work very hard, in bringing products to you, at a reasonable price! If you find this software being distributed illegally, please notify us, and you will be rewarded. Violators WILL be prosecuted!

Instructions

To install this printer driver for either Print Shop or the Print Shop Companion, follow these steps:

- 1) Boot up the Print Shop or Print Shop Companion disk, as normal.
- 2) At the main menu, press the arrow key to highlight "SETUP".
- 3) Next, remove the program disk and put the appropriate side of the Printer Driver disk into your drive (side A for Print Shop, or side B for the Print Shop Companion).
- 4) Now press the RETURN key, and it will load the Printer Driver. Once loaded, a message on the screen will tell you to press any key to continue. Doing so, will take you back to the main menu.
- 5) Finally, remove the Printer Driver disk from the drive, then place the program disk (Print Shop or Print Shop Companion) back into your drive. You are now ready to use your Atari 1020 with the program!

Notes: Any time you turn on your computer to use this Printer Driver, it MUST be loaded from it's disk (as in the above steps). However, once loaded, the Printer Driver remains resident in memory. You can make as many print-outs as you wish (greeting cards, calenders, signs, stationary, etc.), without having to reload the driver.

Be sure to use the correct side of the Printer Driver disk (side A for Print Shop, side B ofr Print Shop Companion). It does NOT modify your original program disks! (a built-in safety feature) Even though the 1020 Printer Plotter has 4 colors available (black, red, blue, and green), only 1 color is used for each print-out. To change colors BETWEEN print-outs, press the "COLOR" key on the 1020.

If you have any questions on this, or any of other fine products, please contact us. (Address and phone number on front page)