

INSTRUCTIONS FOR LOADING CASSETTE TAPES WITH THE ATARI 410 PROGRAM RECORDER

1. Remove all cartridges from the computer.
2. Insert the prerecorded cassette tape into the program recorder with the label reading toward you.
3. Push *REWIND* to locate the beginning of the tape.
4. Hold down the *START* key on the computer keyboard and then press the *POWER* switch *ON*.
5. Press *PLAY* on the program recorder and then press *RETURN* on the keyboard.
6. When the tape stops, the program has been transferred from the cassette tape to the computer.
7. Push *STOP* on the program recorder.
8. Follow the game play instructions to begin.

CARING FOR TAPE CASSETTES

To protect the data on your cassette tapes:

Keep cassettes in their protective boxes when not in use.

Keep cassettes dry.

Avoid extreme heat or cold.

Avoid touching the tape in the cassette.

Avoid pulling the tape out of the cassette. (*The tape may be wound back into the cassette if necessary by carefully turning the tape hub with a six-sided pen.*)

Keep cassettes away from magnets, electrical or electronic equipment, telephones, etc.