



QUICK REFERENCE CARD

For Atari Computers

The Buttons on the Pad

- LIFT — While drawing, is used to stop cursor from drawing on the screen. Also used to leave the menu mode.
- SELECT — All-purpose button used for selecting features and activating commands.
- MENU — Terminates current activity and return immediately to menu mode.
- RELEASE — Non-electrical button used only to lift paper clamps to allow paper to be secured to the pad.

Main Menu

- Clear — Erases the entire screen.
- Color/Swap — Allows new color selection of 4 available colors
- Fill — Paints within drawn borders with currently defined design.
- Draw — Freehand drawing with current color, brush style, and design.
- Erase — Used to selectively erase portions of the screen.
- Color Palette — Use to select desired drawing color.
- Design — Allows you to define a combination of patterns and colors for drawing and fills.
- Brush — Allows you to define your favorite brush for drawing.
- Expert — Entry point to access EXPERT Menu.

Expert Menu

- Lines — Used to preview lines prior to drawing; helps in designing triangles or other line drawings.
- Rays — Same as LINES except origin is not updated.
- Circle — Computer helps you draw perfect Circles or Ovals.
- Box — Computer helps you draw perfect rectangles.
- Copy/B Copy — Allows you to copy the framed portion of your screen to as many other locations on the screen as desired.
- Move/B Move — Allows a copy but erases the original.
- Quad — A drawing mode where anything drawn is automatically copied symmetrically into other three quadrants of the screen.
- Mirror — A drawing mode where anything drawn on the left side of screen is automatically copied to the right.
- Flip — A drawing mode where anything drawn on the top of the screen is symmetrically copied to the bottom.
- Text — Write words on screen to label charts, title drawings, etc.
- Show — Display your final picture with no distracting cursors or menus.
- Files — Entry point to commands which allows you to save your pictures on floppy disk for later viewing or editing.
- Zoom — A switch which will turn off the zoom window if it is currently active or on if it is now off.