



A410 Tape Recorder

A T A R I

Atari International (UK) Inc.
Atari House
Railway Terrace
Slough
Berkshire SL2 5BZ
Telephone No: Slough (0753) 33344

A T A R I 410 CONNECTION GUIDE AND HELPFUL HINTS

1. 410 Program Recorder.

Your Atari Program Recorder is supplied with a Power Transformer (type 6498) used to power your Tape Recorder.

Please ensure that when the Tape Recorder is not in use that the power transformer is switched off at the mains.

The 410 is not fitted with an autostop. When using the Fast Forward or Rewind buttons please ensure that the stop switch is pressed when the tape stops running. This will prevent tape strain.

Helpful hints

TAPE RECORDER NOT LOADING PROGRAMS:

- a. Check power connector lead from the transformer is properly plugged in.
- b. Ensure that the power transformer is fully plugged in and that the socket is switched on.
- c. When instructing the computer to "CLOAD or CSAVE" remember to press the "return" key TWICE, once before the buzz and once after.
- d. If "ERROR No" appears during a program load, rewind the tape and type "NEW", then press the return key before typing "CLOAD" then try again. Also check that the tape has fully rewound to the beginning.
- e. If a program appears to have loaded but will not run, check that the BASIC cartridge is installed properly in the front "flip-up" panel.

Opening this panel will however erase everything from the screen, and from the computer's memory.