

IMPORTANT LOADING INSTRUCTIONS!

DISKETTE:

- o Turn off computer - insert BASIC cartridge.
- o Insert diskette into drive - turn on computer.

CASSETTE:

- o Turn off computer - insert BASIC cartridge.
- o Insert cassette into cassette player - rewind fully.
- o Press 'PLAY' on cassette player.
- o Hold down 'START' key on computer.
- o Turn on computer.
- o Press the 'RETURN' key after you hear the tone.
- o Allow the tape to continue loading after the 'intro'.
- o If you have a disk drive or 850 Interface, be sure to DISCONNECT either unit before turning on computer.
- o If program will not load, try other side of cassette.

Artworx will replace any defective cassette or diskette free of charge within 90 days from date of purchase. If you damage your cassette or diskette any time after the warranty period, send it plus \$5.00 to Artworx for replacement.