

OKIMATE 10 COLOR PRINT -- INSTRUCTIONS

OKIMATE 10 Color Print allows you to print pictures from your computer's display screen.

Create color illustrations, posters, charts and graphs using one of the popular graphics programs or accessories available for the Atari 800XL. Color Print works with the following:

GRAPHICS SOFTWARE OR ACCESSORY	SAMPLE
1 = Koala Painter/Koala Pad by Koala Technologies	Desert Scene
2 = Super Sketch from Personal Peripherals	
3 = Atari Paint from Atari Inc.	
4 = Fun With Art from Epyx	
5 = Tech-Sketch from Tech Sketch Inc.	
6 = Powerpad from Chalkboard Inc.	
7 = Micro Painter from Datasoft	
8 = Movie Maker from Reston Software	
9 = Micro Illustrator	
10 = User	

HOW TO PRINT A PICTURE

Color Print will ask you to select a picture format. Choose the graphics program or accessory you have used to make pictures. Color Print works from disks created by your graphics program.

If you do not yet own one of these programs, you may wish to print one of the sample pictures included on the Color Print disk.

When you have made your selections, the disk drive will activate. After a moment, a directory of picture files will appear. Typically, the only names that will appear are printable pictures.

To select a picture, type the letter next to the file name you choose. Then press RETURN to begin printing. If you want to quit without printing a picture, press the RETURN key. If there are no picture files on the disk, the directory will say so. You must press RETURN to exit without printing.

Okidata cannot guarantee compatibility with the graphics packages above, because they are subject to change by the original manufacturer.

Color Print version 2.0 created by

Application Techniques and City Software
Copyright 1984 OKIDATA Div of OKI AMERICA, Inc.