


2600 B

TV GAME SYSTEM


OPERATION MANUAL

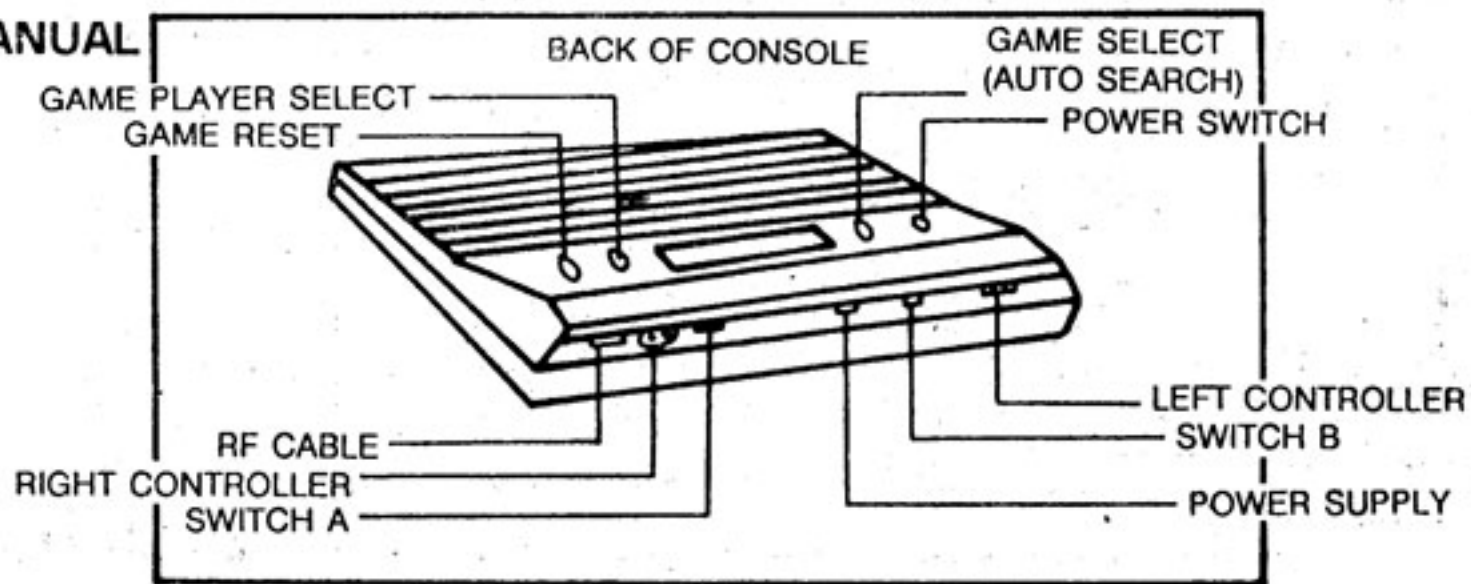

HOW TO CONNECT THE CONSOLE PARTS

1. Plug antenna cable to antenna switch box socket marked GAME side.
2. Move the select switch to "GAME" (Remember that after playing with your "TV GAME" set move the switch back to "TV" for regular viewing.)
3. Plug the jack of the power supply into the socket in back of your "TV GAME" set. Make sure that the ON/OFF switch on the console unit is turned off.
4. Plug the power supply unit into the electrical outlet.
5. Plug your joystick into the jacks at the back console. For most one-player games, you will use the left. and two-player games, just use the right joystick.
6. Turn "TV GAME" on and turn TV to channel "3" or suitable channel. If your TV set has automatic finetuning control, turn it "OFF" and manually fine tune for best picture.
7. Auto-Search Function:

Use the Front Cover right "GAME SELECT" to Auto-Search the game to play.

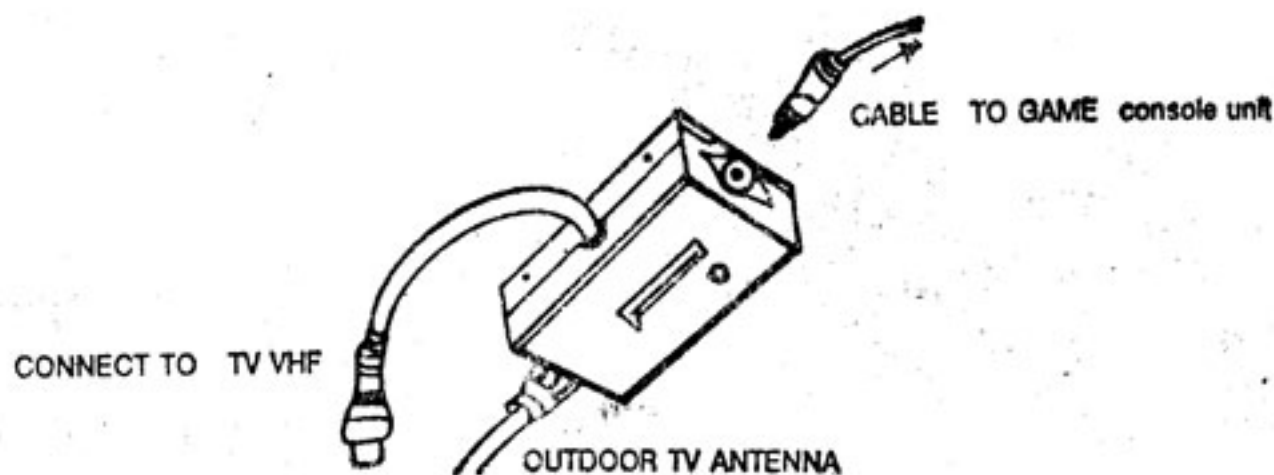

HOW TO PLAY


1. Turn power on.
2. Push games select switch to change games.
3. Push reset to start.

CARE AND MAINTENANCE

- Always turn your power switch "OFF" when inserting or removing a cartridge.
- Do not lift the console or the joysticks by the connecting wires.
- Take care not to spill liquids on your console or game cartridges.
- Do not expose the console, joysticks, or cartridges to extreme heat or moisture.
- Take care not to drop the console, joysticks or cartridges.
- Remember to turn the power switch "OFF" and to unplug the power adaptor when the game is not in use.
- Clean the controllers and console with a soft, slightly damp cloth.
- Turn the "TV GAME" off when not in use.


نظام لعبة تلفزيونية

كتيب التشغيل

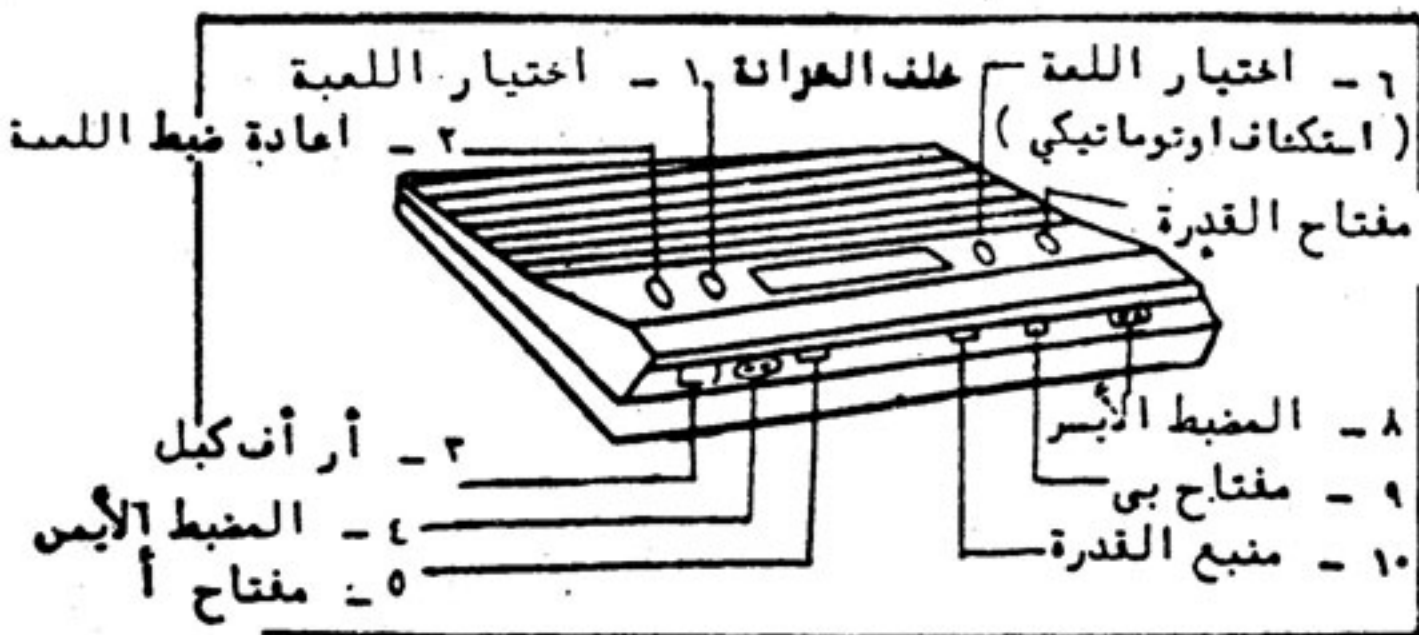

كيفية توصيل أجزاء الخزانة

- ١ - وصل كبل الهوائي الى تحويف صندوق مفتاح الهوائي حيث يتواجد علامة " اللعبة " .
- ٢ - ضع مفتاح الاختيار في وضع " اللعبة " (تأكد من استرجاع المفتاح الى وضع " التلفزيون " لامكانية معاودة البرنامج العادي بعد انتهاء اللعب) .
- ٣ - وصل مقبس منبع القدرة الى التحويف خلف جهاز اللعبة . تأكد من انقطاع القدرة لدى الخزانة .
- ٤ - وصل جهاز منبع القدرة الى المأخذ الكهربائي .
- ٥ - وصل جهاز الادارة الى المقبس بخلف الخزانة واستخدم الأيسر للاعب الوحيد في معظم حالة والأيمن للاعبين المشتركين .
- ٦ - افتح قدرة اللعبة وادر قناة التلفزيون الى رقم " ١ " او آخر تراه مناسب ، ان كان لتلفزيونك وظيفة تكييد المورة الدقيقة اوتوماتيكيا ، اقلع والمغتنه هذه وكيفه يدويسا .
- ٧ - وظيفة الاستكشاف اوتوماتيكيا :
استخدم " اختيار اللعبة " الأيمن بالذات الأمامي لاستكشاف لعبة لك .

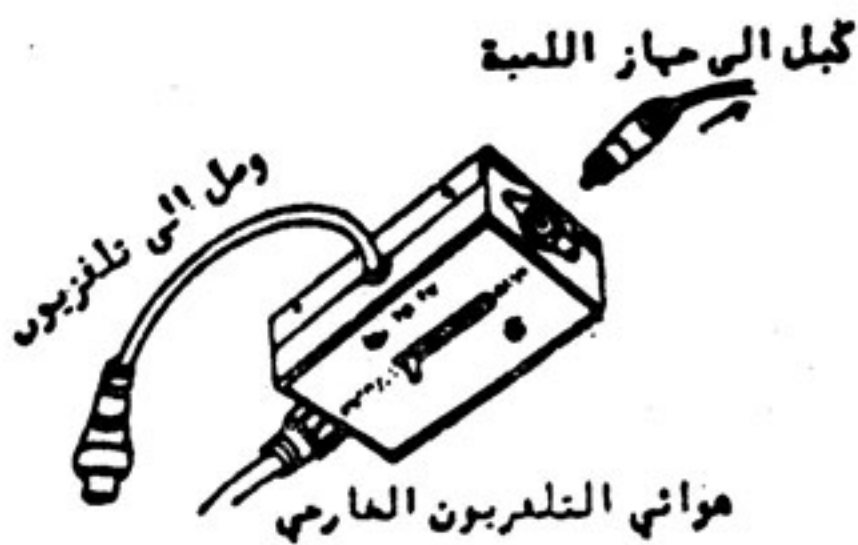

طريقة اللعب

- ١ - افتح القدرة .
- ٢ - ادفع مفتاح اختيار اللعبة لتغيير لعبة .
- ٣ - ادفع مفتاح اعادة ضبط اللعبة لابتداء اللعب .

مناية وصيانة

- ٪ تأكد من انقطاع القدرة عند ادخال او اخراج الليفة .
- ٪ عدم رفع الخزانة او المضبط بواسطة كبل التوصيل .
- ٪ تجنب من اسقاط السوائل على الخزانة او الليفة .
- ٪ ابعد الخزانة ، المضبط ، او الليفة عن مكان حار او رطب جدا .
- ٪ تجنب من اسقاط الخزانة ، المضبط ، او الليفة على الارض .
- ٪ تأكد من انقطاع القدرة وازالة المقبس بعد انتهاء اللعبة .
- ٪ نظف المنبدا والخزانة بقماش ناعم مبلل قليلا .
- ٪ تأكد من انقطاع قدرة جهاز التلفزيون في حالة عدم استعماله .